

There is specific information you need to collect from the phone company or service provider before you begin installation of your SunISDN board and SunISDN software. Please refer to the *SunISDN User's Guide* for detailed information on what and how to acquire specifics.

This manual assumes you have made many decisions prior to installation of SunISDN. These decisions include why you are using ISDN, how big a data pipe you need, what type, if any, Network Termination (NT-1) device to use, and whether to use an ISDN phone along with your workstation as part of your Termination Equipment (TE). If these issues are not clear to you, refer to the *SunISDN User's Guide*.

This manual describes necessary hardware modification in your system to establish a hardware connection over an ISDN network. Basically, this process includes the following:

- In North America, install your NT-1 and power supply by attaching the cable between the U jack and the termination jack left at the wall.
- SPARCstation 10, LX, or Voyager system users must remove the plug in the TE phone jack (see Chapter 2, "ISDN Configuration"). Then do one of the following:
 - In North America, connect with the S/T jack on the NT-1 adaptor.
 - Elsewhere, connect directly to the termination left by the service provider (S/T connection point).

- For users installing their own SunISDN SBus board,
 - Halt and open your system.
 - Install the SunISDN board.
 - Connect cable between TE port and NT-1 device (S/T connection point for North American) or wall jack (S/T connection point)
 - Restart the system using `ok> b -r` at your system prompt.
- Use the *SunISDN User's Guide* for installing the software from the SunISDN CD and for configuring the ISDN and PPP configuration files.