

Contents

Preface.....	xv
1. Introducing the ZX Graphics Accelerator.....	1
Overview.....	1
Systems Covered.....	1
Software Requirements.....	2
Screen Resolution and Refresh Rate.....	2
2. General Installation Instructions.....	5
Installation Kit.....	6
Tools Needed.....	6
Installation Warnings.....	7
System Shut Down.....	8
When System is Working Normally.....	8
When System Does Not Respond Normally.....	9
What's Next.....	11

3. Installing the ZX Board in a Two-slot SPARCstation	13
Installation Summary	13
Shut Down the System	14
Remove the Monitor	14
Open the System Unit	15
Attach the Antistatic Wrist Strap	17
Remove the Filler Plates	18
Prepare the ZX Board for Installation	19
Install the ZX Board	20
Close the System Unit	22
Connect the Monitor	23
Power On the System	24
Reconfigure the System	25
What's Next	25
4. Installing the ZX Board in a Four-slot SPARCstation	27
Installation Summary	27
Shut Down the System	28
Remove the Monitor	28
Remove the System Unit Top Cover	29
Attach the Antistatic Wrist Strap	31
Remove Existing Frame Buffer Board	32
Select the SBus Slots	33
Remove the Filler Plates	34
Install the ZX Board	35

Replace the System Unit Top Cover	37
Connect the Monitor	38
Power On the System	39
Reconfigure the System.....	40
What's Next	40
5. Installing the ZX Board in the Ultra 1 Workstation	41
Installation Summary	42
Prepare the System for Installation	43
Attach the Antistatic Wrist Strap	44
Remove the Filler Plate	45
Install the ZX Board.....	46
Close the System Unit	50
Connect the Monitor	50
Power on the System.....	51
Reconfigure the System.....	52
What's Next	52
6. Installing the ZX Board in the Ultra 2 Workstation	53
7. Installing the ZX Board in a Deskside or Data Cabinet System	55
Reference Information.....	56
Notes, Cautions, and Warnings	56
Prepare the SBus Slots.....	57
Attach the Antistatic Wrist Strap	58
Replace the Standoffs on the System Board	59
Install the ZX Board.....	61

Finish Up.....	63
Reconfigure the System.....	64
What's Next	64
8. Changing the Screen Resolution	65
Overview.....	65
Supported Screen Resolutions	66
Changing the Screen Resolution Temporarily	67
Modifying the <code>leoconfig</code> Initialization File	68
Restrictions	70
Using a Non-Sun Monitor as Console.....	70
Restrictions to Changing the Default Screen Resolution ..	71
9. Troubleshooting	73
Troubleshooting Procedure.....	74
No Video Display.....	74
No Dark Border on the Screen	74
Partly Hidden or Shifted Icons.....	75
Resolution Problem	75
Checking <code>fcode-debug</code> Parameter	76
Error Messages.....	76
Sundiag Diagnostics	77
Field Replacement Units.....	78

A. Video Cable and Interface Signals	79
Video Connector Signals.....	80
Stereo Connector Signals.....	83
Stereo Cable on the Ultra 1 System	84
B. Safety Agency Compliance	85
Safety Precautions	85
Symbols.....	86
Modifications to Equipment.....	86
Placement of a Sun Product	86
Power Cord Connection	87
Monitor	87
Lithium Battery	87
System Unit Cover.....	88
Index	89

