

# Contents

---

Preface .....	xvii
<i>Part 1 –System Information</i>	
<b>1. Product Description .....</b>	<b>1-1</b>
1.1 Standard Features.....	1-1
1.1.1 Subassemblies, Boards, and Components .....	1-2
1.1.2 Interior View .....	1-3
1.1.3 Rear View of SPARCstation 5 System.....	1-4
1.2 Internal Options .....	1-5
1.3 External Options.....	1-6
<i>Part 2 –Troubleshooting</i>	
<b>2. Troubleshooting Overview .....</b>	<b>2-1</b>
2.1 Factory-Defined Boot Mode .....	2-2
2.2 After Power Is Switched On .....	2-4
2.3 Diagnostic Tools and When to Use Them .....	2-7
2.4 Power-On Self-Test.....	2-7

---

2.5	FORTH-Based PROM Diagnostics . . . . .	2-8
2.6	FORTH Monitor . . . . .	2-10
2.7	SunDiag System Exerciser . . . . .	2-11
2.8	SunDiagnostic Executive . . . . .	2-11
<b>3.</b>	<b>Power-On Self-Test (POST)</b> . . . . .	<b>3-1</b>
3.1	Power-On Self-Test (POST) . . . . .	3-1
3.2	Normal Mode . . . . .	3-5
3.3	Full Diagnostic Mode. . . . .	3-5
3.4	Abbreviated Diagnostic Mode . . . . .	3-6
3.4.1	Setting Up a <code>tip</code> Connection to Another System . .	3-6
3.5	Tests the POST Runs. . . . .	3-7
3.6	POST Error Messages. . . . .	3-9
3.7	Status Lights (LEDs) and Indicators. . . . .	3-9
<b>4.</b>	<b>Troubleshooting Procedures</b> . . . . .	<b>4-1</b>
4.1	No Video Output on the System Monitor . . . . .	4-3
4.2	Power-On Does Not Succeed . . . . .	4-3
4.2.1	Power Supply Test . . . . .	4-4
4.2.2	System Board Test . . . . .	4-5
4.3	Disk Drive Errors . . . . .	4-6
4.3.1	Verifying the Built-In SCSI Controller . . . . .	4-7
4.4	Determining Faulty DSIMM Locations . . . . .	4-8
 <i>Part 3 –Preparing for Service</i>		
<b>5.</b>	<b>Safety and Tools Requirements</b> . . . . .	<b>5-1</b>
5.1	Safety Requirements. . . . .	5-1

---

5.2	Symbols . . . . .	5-3
5.3	System Precautions. . . . .	5-4
5.4	Tools Required . . . . .	5-4
5.5	Electrostatic Discharge (ESD) Precautions . . . . .	5-4
<b>6.</b>	<b>Power On and Off. . . . .</b>	<b>6-1</b>
6.1	Powering Off the System. . . . .	6-1
6.1.1	When the System Is Working Normally. . . . .	6-1
6.1.2	When the System Does Not Respond Normally . . . . .	6-3
6.2	Powering On the System. . . . .	6-4
<i>Part 4 –Subassembly Removal and Replacement</i>		
<b>7.</b>	<b>Internal Access . . . . .</b>	<b>7-1</b>
7.1	Removing the Cover . . . . .	7-1
7.2	Attaching the Wrist Strap . . . . .	7-4
7.3	Replacing the Cover. . . . .	7-5
<b>8.</b>	<b>Major Subassemblies. . . . .</b>	<b>8-1</b>
8.1	Power Supply . . . . .	8-1
8.1.1	Removing the Power Supply. . . . .	8-2
8.1.2	Replacing the Power Supply . . . . .	8-4
8.2	Power LED . . . . .	8-5
8.2.1	Removing the Power LED . . . . .	8-5
8.2.2	Replacing the Power LED . . . . .	8-7
8.3	Internal Speaker . . . . .	8-8
8.3.1	Removing the Internal Speaker. . . . .	8-8
8.3.2	Replacing the Internal Speaker . . . . .	8-11

---

8.4	SCSI Backplane . . . . .	8-12
8.4.1	Removing the SCSI Backplane . . . . .	8-12
8.4.2	Replacing the SCSI Backplane . . . . .	8-14
<b>9.</b>	<b>Storage Devices . . . . .</b>	<b>9-1</b>
9.1	Hard Disk Drive . . . . .	9-2
9.1.1	Removing a Hard Disk Drive . . . . .	9-3
9.1.2	Replacing a Hard Disk Drive . . . . .	9-4
9.2	CD-ROM Drive . . . . .	9-7
9.2.1	Removing the CD-ROM Drive . . . . .	9-7
9.2.2	Replacing the CD-ROM Drive . . . . .	9-8
9.3	Diskette Drive . . . . .	9-10
9.3.1	Removing the Diskette Drive . . . . .	9-11
9.3.2	Replacing the Diskette Drive . . . . .	9-14
9.4	Internal SCSI Data Cable . . . . .	9-16
9.4.1	Removing the Internal SCSI Cable . . . . .	9-16
9.4.2	Replacing the Internal SCSI Data Cable . . . . .	9-18
9.5	DC Power Harness . . . . .	9-21
9.5.1	Removing the DC Power Harness . . . . .	9-21
9.5.2	Replacing the DC Power Harness . . . . .	9-25
9.6	Diskette Data Cable . . . . .	9-27
9.6.1	Removing the Diskette Data Cable . . . . .	9-27
9.6.2	Replacing the Diskette Data Cable . . . . .	9-28
9.7	CD-ROM Audio Cable . . . . .	9-29
9.7.1	Removing the CD-ROM Audio Cable . . . . .	9-29
9.7.2	Replacing the CD-ROM Audio Cable . . . . .	9-30

---

*Part 5 –System Board*

<b>10. System Board Overview</b> .....	<b>10-1</b>
10.1 Damage Prevention .....	10-2
10.2 Handling System Boards and Assemblies.....	10-2
10.3 System Board Layout.....	10-3
10.4 Replaceable System Board Components .....	10-3
<b>11. System Board and Component Replacement</b> .....	<b>11-1</b>
11.1 SBus Cards.....	11-2
11.1.1 Removing an SBus Card.....	11-2
11.1.2 Replacing an SBus Card .....	11-5
11.2 S24 Frame Buffer Card.....	11-8
11.2.1 Removing an S24 Frame Buffer Card .....	11-8
11.2.2 Replacing an S24 Frame Buffer Card .....	11-10
11.3 DSIMMs.....	11-13
11.3.1 Removing a DSIMM.....	11-14
11.3.2 Replacing a DSIMM .....	11-15
11.4 System Board.....	11-18
11.4.1 Removing the System Board .....	11-18
11.4.2 Replacing the System Board .....	11-20
11.4.3 Setting Jumpers.....	11-22
11.5 NVRAM.....	11-24
11.5.1 Removing the NVRAM Chip.....	11-24
11.5.2 Replacing the NVRAM Chip.....	11-25

---

*Part 6 –Illustrated Parts Breakdown*

<b>12. Illustrated Parts Breakdown</b> .....	<b>12-1</b>
12.1 Illustrations of Selected CRUs .....	12-2
12.2 Replacement Parts List .....	12-5

*Part 7 –Appendixes, Glossary, Index*

<b>A. System Specifications</b> .....	<b>A-1</b>
A.1 Physical Specifications .....	A-2
A.2 Input Power Requirements .....	A-2
A.3 Environmental Requirements .....	A-3
<b>B. SPARCstation 5 Input/Output Connectors</b> .....	<b>B-1</b>
B.1 SCSI Connector (External) .....	B-2
B.2 Parallel Port Micro-D Connector .....	B-3
B.3 Attachment Unit Interface (AUI) Micro-D Connector ...	B-4
B.4 Twisted-Pair Ethernet Connector .....	B-5
B.5 Serial Connector Ports A and B .....	B-6
B.6 Keyboard/Mouse Connector .....	B-7
B.7 Audio Ports .....	B-8
B.7.1 Headphone Connector .....	B-8
B.7.2 Audio Line-Out Connector .....	B-8
B.7.3 Audio Line-In Connector .....	B-9
B.7.4 Microphone Connector .....	B-9
B.8 13W3 Video Connector .....	B-10
<b>C. SCSI Targeting</b> .....	<b>C-1</b>

---

<b>D. FORTH Diagnostics</b> .....	<b>D-1</b>
D.1 Running the FORTH Diagnostics .....	D-2
D.1.1 test < <i>alias name</i> >, test < <i>device path</i> >.....	D-4
D.1.2 test-all .....	D-4
D.1.3 watch-clock.....	D-4
D.1.4 watch-net, watch-aui, watch-tpe, and watch-net-all.....	D-5
D.1.5 probe-scsi, probe-scsi-all .....	D-7
D.1.6 module-info.....	D-8
D.1.7 test-memory.....	D-8
D.2 Returning to the Old-Style Sunmon Compatibility Mode Prompt .....	D-9
Glossary.....	Glossary-1
Index .....	Index-1

