

## Figures

---

Figure 1-1	Basic SPARCstation 5 System . . . . .	1-2
Figure 1-2	Interior View of SPARCstation 5 System . . . . .	1-3
Figure 1-3	Rear View of SPARCstation 5 System . . . . .	1-4
Figure 2-1	Factory-Defined Boot Sequence—POST Phase Settings and Tests . . . . .	2-2
Figure 2-2	Factory-Defined Boot Sequence—OpenBoot PROM Phase Settings and Tests . . . . .	2-3
Figure 3-1	Arrangement of Sun Type-5 Keyboard Diagnostic LEDs . . . . .	3-2
Figure 3-2	Sun Type-4 Keyboard . . . . .	3-3
Figure 3-3	Sun Compact 1 Keyboard . . . . .	3-3
Figure 3-4	SPARCstation System Banner . . . . .	3-4
Figure 3-5	Location of System Power LED . . . . .	3-9
Figure 4-1	Power Supply Connector . . . . .	4-4
Figure 4-2	DSIMM Slot Locations . . . . .	4-8
Figure 7-1	Removing the Rear Panel Cover Screws . . . . .	7-2
Figure 7-2	Removing the Cover . . . . .	7-3
Figure 7-3	Grounding the Wrist Strap to the Power Supply . . . . .	7-4

---

Figure 7-4	Replacing the Cover . . . . .	7-5
Figure 7-5	Securing the System Unit Cover . . . . .	7-6
Figure 8-1	Removing the Power Supply . . . . .	8-3
Figure 8-2	Connecting the DC Power Harness to the Power Supply . . . . .	8-4
Figure 8-3	Power LED and In-line Connector . . . . .	8-6
Figure 8-4	Positioning the LED Cable . . . . .	8-7
Figure 8-5	Removing the Speaker Cover . . . . .	8-9
Figure 8-6	Removing the Speaker . . . . .	8-10
Figure 8-7	Speaker Connections . . . . .	8-11
Figure 8-8	Removing the SCSI Backplane . . . . .	8-13
Figure 9-1	Drive Locations . . . . .	9-2
Figure 9-2	Removing a Hard Disk Drive . . . . .	9-4
Figure 9-3	Replacing a Disk Drive . . . . .	9-6
Figure 9-4	Removing the CD-ROM Drive . . . . .	9-7
Figure 9-5	Jumper Settings for SPARCstation 5 CD-ROM Drive . . . . .	9-8
Figure 9-6	Replacing the CD-ROM Drive . . . . .	9-9
Figure 9-7	Diskette Drive Location . . . . .	9-10
Figure 9-8	Removing the CD-ROM Filler Panel . . . . .	9-11
Figure 9-9	Disengaging the Diskette Drive . . . . .	9-12
Figure 9-10	Removing the Diskette Drive . . . . .	9-13
Figure 9-11	Diskette Drive Switch and Grommets . . . . .	9-14
Figure 9-12	Replacing the Diskette Drive . . . . .	9-15
Figure 9-13	System Board Cable Connections . . . . .	9-16
Figure 9-14	Rear Panel Captive Screws . . . . .	9-17
Figure 9-15	Removing the System Board . . . . .	9-17

---

Figure 9-16	Internal Cable Routing . . . . .	9-19
Figure 9-17	Replacing the System Board . . . . .	9-20
Figure 9-18	Backpanel Captive Screws . . . . .	9-21
Figure 9-19	System Board Cable Connections . . . . .	9-22
Figure 9-20	Rear Panel Captive Screws . . . . .	9-22
Figure 9-21	Removing the System Board . . . . .	9-23
Figure 9-22	Internal Cable Routing . . . . .	9-24
Figure 9-23	Replacing the System Board . . . . .	9-26
Figure 9-24	Backpanel Captive Screws . . . . .	9-27
Figure 9-25	System Board Cable Connections . . . . .	9-28
Figure 9-26	Audio Connector on the CD-ROM Drive . . . . .	9-29
Figure 9-27	CD-ROM Audio Connector on the System Board . . . . .	9-30
Figure 10-1	SPARCstation 5 System Board . . . . .	10-3
Figure 11-1	SBus Slot Locations . . . . .	11-2
Figure 11-2	Opening the SBus Card Retainers . . . . .	11-3
Figure 11-3	Removing the Extractor From the SBus Card . . . . .	11-3
Figure 11-4	Installing the SBus Card Extractor . . . . .	11-4
Figure 11-5	Removing a Single-Width SBus Card . . . . .	11-4
Figure 11-6	Removing a Double-Width SBus Card . . . . .	11-5
Figure 11-7	Inserting the SBus Card . . . . .	11-6
Figure 11-8	Closing the SBus Card Retainers . . . . .	11-7
Figure 11-9	AFX Bus Slot . . . . .	11-8
Figure 11-10	Opening the Card Retainers . . . . .	11-9
Figure 11-11	Removing an S24 Frame Buffer Card . . . . .	11-10
Figure 11-12	Inserting the S24 Frame Buffer Card . . . . .	11-11

---

Figure 11-13	Closing the Card Retainers. . . . .	11-12
Figure 11-14	DSIMM Slot Locations on the System Board. . . . .	11-14
Figure 11-15	Ejecting a DSIMM . . . . .	11-15
Figure 11-16	Orienting a DSIMM. . . . .	11-16
Figure 11-17	Installing a DSIMM. . . . .	11-17
Figure 11-18	System Board Cable Connections . . . . .	11-19
Figure 11-19	System Board Captive Screws . . . . .	11-19
Figure 11-20	Removing the System Board . . . . .	11-20
Figure 11-21	Installing the System Board . . . . .	11-21
Figure 11-22	System Board Captive Screws . . . . .	11-21
Figure 11-23	Setting the Serial Port Jumpers . . . . .	11-23
Figure 11-24	Locating the NVRAM. . . . .	11-24
Figure 12-1	Selected CRUs—System Unit. . . . .	12-2
Figure 12-2	Standard External Cables . . . . .	12-3
Figure 12-3	Optional External Cables . . . . .	12-4
Figure 12-4	Microphone and Cable . . . . .	12-4
Figure B-1	External SCSI Connector . . . . .	B-2
Figure B-2	Parallel Port Micro-D Connector. . . . .	B-3
Figure B-3	Attachment Unit Interface (AUI) Micro-D Connector . . . . .	B-4
Figure B-4	Twisted-Pair Ethernet Connector . . . . .	B-5
Figure B-5	Serial Connector. . . . .	B-6
Figure B-6	Keyboard/Mouse Connector. . . . .	B-7
Figure B-7	SPARCstation 5 Audio Ports . . . . .	B-8
Figure B-8	SPARCstation 5 13W3 Video Connector . . . . .	B-10
Figure D-1	Displaying FORTH Diagnostics . . . . .	D-3