

Tables

Table 1-1	Internal Options	1-5
Table 1-2	Selected External SCSI Peripheral Options	1-6
Table 2-1	NVRAM Parameters Used During POST and Boot Sequence	2-5
Table 2-2	Summary of Autoboot and Diagnostic Switch Parameter Settings.	2-6
Table 2-3	Diagnostic Tools	2-7
Table 2-4	Selected FORTH Diagnostic Tests.	2-8
Table 3-1	Interpreting the Keyboard Diagnostic LEDs.	3-4
Table 4-1	Troubleshooting Tips	4-2
Table 4-2	Power Supply Connector Pin Assignments.	4-5
Table 4-3	Troubleshooting Disk Drive Errors.	4-6
Table 4-4	Physical Memory Address Ranges for Slots 0 Through 7	4-9
Table 5-1	Safety Precautions	5-2
Table 12-1	Part Number List—Customer Replaceable Units.	12-5
Table 12-2	Part Number List—Miscellaneous Items	12-6
Table A-1	Physical Specifications	A-2
Table A-2	Input Power Requirements and Power Dissipation.	A-2

Table A-3	Environmental Requirements	A-3
Table B-1	Pinout Signals for External SCSI Connector	B-2
Table B-2	Pinout for Parallel Port Micro-D Connector	B-3
Table B-3	Pinout for Attachment Unit Interface (AUI) Micro-D Connector	B-4
Table B-4	Pinout for Twisted-Pair Ethernet Connector	B-5
Table B-5	Pinout for Serial Connector Ports A and B	B-6
Table B-6	Pinout for Keyboard/Mouse Connector	B-7
Table B-7	Signals for the SPARCstation 5 Audio Ports	B-8
Table B-8	13W3 Video Connector Pin Assignments	B-10
Table C-1	SCSI Targeting—Solaris 1.x (SunOS 4.x) Operating Systems .	C-2
Table C-2	SCSI Targeting—Solaris 2.x (SunOS 5.x) Operating Systems .	C-2