

Index

A

- AC power cord, illustration, 12-3
- access, to subassemblies, 7-1
- antistatic
 - precautions, 5-4, 10-2
 - wrist strap, attaching, 7-4
- attachment unit interface
 - See AUI
- audio connector pinouts, B-8
- Audio Module, 11-8
 - removal/replacement, 11-8 to 11-13
- AUI
 - attachment unit interface
 - connector, B-4
 - SPARC Xterminal 1 rear panel
 - connector, 1-6
 - SPARCstation 4 rear panel
 - connector, 1-5
- AUI connector pinout, B-4
- auto-boot? parameter, 2-4 to 2-6, 2-11, 3-5

B

- boot <disk alias> command, 2-9
- boot failure, 4-2
- boot-dev parameter, 2-5
- boot-file parameter, 2-5

C

- cables, illustrations, 12-3
- CD-ROM audio cable, 9-24
 - removal/replacement, 9-24 to 9-31
- CD-ROM drive, 9-6
 - removal/replacement, 9-6 to 9-8
- connector pin assignments
 - Audio Module connectors, B-8
 - AUI connector, B-4
 - keyboard/mouse connector, B-7
 - parallel connector, B-3
 - SCSI connector, B-2
 - serial connectors, B-6
 - twisted-pair Ethernet connector, B-5
 - video connector, B-10
- CPU board
 - See system board
- CRU
 - illustrations, 12-2
 - replacement part numbers, 12-4
 - tools for removal/replacement, 5-4
- customer replaceable unit
 - See CRU

D

- DC power harness, 9-21
 - removal/replacement, 9-21 to 9-22

diag-device parameter, 2-5
diag-file parameter, 2-5
diagnostics
 default boot mode, 2-2
 firmware, 2-1
 on-board, D-1
 software, 2-1
 tools overview, 2-2
 tools summary, 2-7
diag-switch? parameter, 2-2 to 2-9, 3-1,
 3-5, 3-6, D-8, D-9
disk drive, 9-2
 boot failure, 4-2, 4-6
 error, 4-6
 removal/replacement, 9-2 to 9-5
 SCSI targets automatically
 assigned, C-1
diskette data cable, 9-22
 removal/replacement, 9-22 to 9-24
diskette drive, 9-9
 removal/replacement, 9-9 to 9-17
 seating, 9-15
 setting drive switch, 9-13
DSIMM, 11-19
 locating faulty, 4-8
 removal/replacement, 11-19 to 11-23
 See also memory

E

electrostatic discharge (ESD)
 precautions, 5-4
environmental requirements, A-5
error messages, 3-9
 disk drive, 4-6
 read, write, or parity, 4-2, 4-6
external options, 1-8

F

floppy disk drive
 See diskette drive
FORTH Toolkit, 2-7

H

headphone connector, B-8
hung system, 6-3
 halting, 6-3

I

illustrated parts breakdown, 12-1 to 12-6
input power requirements, A-3, A-4
interior view of system, 1-3
internal options, 1-7

K

keyboard cable, illustration, 12-3
keyboard diagnostic LEDs, 3-2, 3-9
keyboard/mouse connector pinout, B-7

M

main logic board
 See system board
memory
 error reporting, 4-8
 location "J" number, 4-8
 physical address, 4-8
 See also DSIMM
mfg-switch? parameter, 2-4
microphone illustration, 12-4
module-info, D-8

N

nonvolatile random access memory
 See NVRAM
NVRAM, 11-36
 parameters, 2-5
 removal/replacement, 11-36 to 11-37

O

ok prompt, 2-4 to 2-7, 2-11
On-Board Diagnostics, D-1
options
 external, 1-8
 internal, 1-7

P

- parallel connector pinout, B-3
- part numbers, listing, 12-4
- physical specifications, A-2
- pin assignments
 - See connector pin assignments
- POST, 3-1, 3-9
 - detailed information, 3-5
 - Diagnostic Mode, 3-5
 - full diagnostic tests, 3-7
 - keyboard LEDs, 3-2, 3-4
 - Normal Mode, 3-5
 - overview, 2-4
 - silent (abbreviated), 3-6
 - system failures, 3-4
 - system passes, 3-4
- power
 - turning off, 6-1 to 6-4
 - turning on, 6-4
- power LED, 8-5
 - removal/replacement, 8-5 to 8-8
- power on, fails, 4-3
- power supply, 8-1
 - removal/replacement, 8-1 to 8-5
 - voltage checkpoints, 4-4
- power-off command, 2-10
- Power-On Self Test
 - See POST
- precautions, 5-4, 10-2
- probe-scsi, 2-10, 4-7
- probe-scsi-all, 2-10, 4-7

R

- rear panel illustration, 1-5
- removal/replacement
 - Audio Module, 11-8 to 11-13
 - CD-ROM audio cable, 9-24 to 9-27
 - CD-ROM drive, 9-6 to 9-7
 - DC power harness, 9-21 to 9-22
 - disk drive, 9-2 to 9-5
 - diskette data cable, 9-22 to 9-24
 - diskette drive, 9-9 to 9-17
 - DSIMM, 11-20 to 11-22

- NVRAM, 11-36 to 11-37
- power LED, 8-5 to 8-8
- power supply, 8-1 to 8-5
- SBus card, 11-2 to 11-7
- SCSI data cable, 9-18 to 9-20
- speaker, 8-8 to 8-12
- system board, 11-28 to 11-35
- system cover, 7-1 to 7-6
- tools needed, 5-4
- VSIMM, 11-24 to 11-27
- replacement parts list, 12-4
- requirements for system
 - environmental, A-5
 - input power, A-3, A-4
- RS232, setting jumpers for, 11-34
- RS423, setting jumpers for, 11-34

S

- safety requirements, 5-1
- SBus card, 11-2
 - removal/replacement, 11-3 to 11-5
- SCSI
 - SCSI cable, external, 12-3
 - SCSI connector pinout, B-2
 - SCSI data cable,
 - removal/replacement, 9-18 to 9-20
 - SCSI targeting conventions, C-1
- selftest-#megs parameter, 2-5, 2-9
- serial connector pinout, B-6
- serial port jumpers, setting, 11-34
- small computer system interface
 - See SCSI
- speaker, 8-8
 - removal/replacement, 8-8 to 8-12
- specifications
 - environmental, A-5
 - physical, A-2
 - power, A-3, A-4
- standard features, 1-1
- SunDiag System Exerciser, 2-11
- SunMicrophone II, 12-4
- symbols, 5-3

- system
 - abnormal response, 6-3
 - subassembly access, 7-1
- system banner, 3-4
- system board
 - damage prevention, 10-2
 - handling instructions, 10-2
 - layout, 10-3, 10-4
 - power connector pinout, 4-4
 - removal/replacement, 11-28 to 11-33
 - replaceable components, 10-4, 10-5
 - SPARC Xterminal 1, 10-4
 - SPARCstation 4, 10-3
 - setting jumpers, 11-34
 - testing, 4-5
 - voltage checkpoints, 4-5
- system cover
 - removal, 7-1
 - replacement, 7-5
- system unit
 - external options, 1-8
 - interior components, 1-2, 1-3
 - interior view, 1-3
 - internal options, 1-7
 - rear panel illustration, 1-5
- test tape0, 2-9
- test tape1, 2-9
- test ttya, 2-9
- test ttyb, 2-9
- test-all, 2-9, D-4
- test-memory, 2-9, D-8
- testing the power supply, 4-4
- testing the system board, 4-5
- thick Ethernet, D-5
- tip connection, 3-6
- tip window, 3-7
- tools required, 5-4
- tpe-link-test? parameter, 2-8
- troubleshooting, 2-1 to 2-11
- turning off power, 6-1 to 6-4
- turning on power, 6-4
- twisted pair Ethernet, D-5
 - cable illustration, 12-3
 - connector pinout, B-5

T

- test <*alias name*>, D-3
- test <*device path*>, D-3
- test cdrom, 2-8
- test disk, 2-9
- test disk0, 2-9
- test disk1, 2-9
- test disk2, 2-9
- test disk3, 2-9
- test floppy, 2-8
- test keyboard, 2-9
- test net, 2-8
- test net-aui, 2-8
- test net-tpe, 2-8
- test screen, 2-8
- test scsi, 2-8
- test tape, 2-9

U

- use-nvramrc? parameter, 2-4

V

- video cable, illustration, 12-3
- video connector pinout, B-10
- video output, none, 4-3
- voltage checkpoints, 4-4
- VSIMM, 11-24
 - removal/replacement, 11-24 to 11-25

W

- watch-aui, 2-9, D-5
- watch-clock, 2-9, D-4
- watch-net, 2-9, D-5
- watch-net-all, 2-10, D-5
- watch-tpe, 2-10, D-5
- wrist strap, attaching, 7-4

X

- X terminal, internal options, 1-7