

Contents

1. Introducing and Installing the SunATM-622/MMF SBus Adapter 2.1	1-1
1.1 Hardware Requirements	1-2
1.2 Software Requirements	1-2
1.3 Installing the SunATM-622/MMF SBus Adapter 2.1	1-3
1.3.1 SunATM-622/MMF SBus Adapter 2.1 Installation	1-3
1.3.2 SunATM-622/MMF SBus Adapter 2.1 Wiring Configuration	1-6
1.4 Testing the SunATM-622 SBus Adapter Before Booting	1-7
2. Introducing and Installing the SunATM-155 SBus Adapters 2.1	2-1
2.1 Hardware Requirements	2-5
2.2 Software Requirements	2-6
2.3 Installing the SunATM-155 SBus Adapters	2-6
2.3.1 SunATM-155 SBus Adapter Installation	2-7
2.3.2 SunATM-155/MMF SBus Adapter 2.1 Wiring Configuration	2-8

2.3.3	SunATM-155/UTP5 SBus Adapter 2.1 Wiring Configuration	2-9
2.4	Testing the SunATM-155 SBus Adapter Before Booting .	2-10
3.	Installing the SunATM Software	3-1
3.1	Before Installing the SunATM Software	3-2
3.2	Installing the SunATM 2.1 Software.....	3-2
3.2.1	Adding the Software Packages Using pkgadd	3-2
3.2.2	Using the pkgadd Utility.....	3-5
3.2.3	Checking the Package Installation Using pkgchk .	3-5
3.2.4	Checking the SunATM Software Installation Using pkginfo.....	3-6
3.2.5	Removing the Software Packages Using pkgrm...	3-6
3.3	Rebooting the System and Examining Network Interfaces	3-6
4.	Configuring the SunATM Interface	4-1
4.1	SunATM SBus Adapter Versions	4-1
4.2	New Features in the SunATM 2.1 Software.....	4-2
4.2.1	Configuring Network Parameters.....	4-2
4.2.2	Support for the Full ATM MIBs in ILMI	4-2
4.2.3	SNMP Forwarding Agent	4-2
4.2.4	Logical Interface Names.....	4-2
4.2.5	Joining Multiple Emulated LANs.....	4-3
4.2.6	Mounting the /opt directory Over an ATM Interface	4-3
4.2.7	Per-Adapter Framing Interface Selection.....	4-3
4.3	Using the atadmin Configuration Program.....	4-4
4.3.1	Starting the atadmin Configuration Program ...	4-4

4.3.2	atmadmin Main Menu	4-5
4.3.3	atmadmin and the SunATM Configuration Files in the /etc directory	4-7
4.4	atmadmin Parameter Groups	4-8
4.4.1	Physical Layer Parameter Group	4-10
4.4.2	Signalling Parameter Group	4-11
4.4.3	ILMI Parameter Group	4-12
4.4.4	Classical IP Parameter Group	4-12
4.4.5	LAN Emulation Parameter Group	4-16
5.	Editing the SunATM Configuration Files	5-1
5.1	Editing the /etc/atmconfig File	5-2
5.1.1	Changing the Framing Interface in the /etc/atmconfig File	5-3
5.1.2	Example of an /etc/atmconfig File	5-3
5.2	Configuring a Classical Internet Protocol Interface	5-4
5.2.1	Editing the /etc/aarconfig File	5-4
5.2.2	Using Variables in the /etc/aarconfig File	5-8
5.2.3	Sample Classical IP Configurations	5-11
5.3	Configuring a LAN Emulation Interface	5-14
5.3.1	Editing the /etc/laneconfig File	5-14
5.3.2	Using Variables in the /etc/laneconfig File	5-18
5.3.3	Sample LAN Emulation Configurations	5-19
5.4	Supporting Logical Interfaces	5-20
5.5	Supporting Multiple Emulated LANS on a Single Interface	5-21

5.6	Tuning Your System for Better SunATM Performance . .	5-23
6.	Classical IP and LAN Emulation Protocols	6-1
6.1	ATM Addresses and Address Registration	6-2
6.1.1	ATM Address Registration Daemon (ILMID)	6-2
6.2	Classical Internet Protocol	6-3
6.2.1	ATM Address Resolution	6-3
6.2.2	ATM ARP Address Resolution Tables	6-4
6.3	LAN Emulation	6-5
6.3.1	LAN Emulation Services	6-6
6.3.2	Resolving an IP Address to an ATM Connection . .	6-7
6.3.3	LAN Emulation Connections	6-9
6.4	ATM and SNMP	6-10
A.	Wiring Scheme and Pin Descriptions	A-1
B.	SunATM SBus Adapters Specifications	B-1
B.1	SunATM-155 SBus Adapters 2.1 Specifications	B-1
B.1.1	Performance Specifications	B-1
B.1.2	Power Specifications	B-2
B.1.3	Physical Dimensions	B-2
B.1.4	Environmental Specifications	B-2
B.2	SunATM-622/MMF SBus Adapter 2.1 Specifications . . .	B-3
B.2.1	Performance Specifications	B-3
B.2.2	Power Specifications	B-3
B.2.3	Physical Dimensions	B-3
B.2.4	Environmental Specifications	B-4

C. Troubleshooting and Error Messages	C-1
C.1 Troubleshooting While Starting a SunATM Interface ...	C-1
C.1.1 Generic Configuration	C-2
C.1.2 Classical IP Configuration	C-3
C.1.3 LAN Emulation Configuration	C-6
C.2 Error Messages	C-10
C.2.1 Error Messages from <code>S00sunatm</code>	C-10
C.2.2 Error Messages from <code>aarsetup</code> and <code>lanesetup</code> .	C-13
C.2.3 Error Messages from the Kernel Drivers	C-17
D. Managing SunATM Interfaces with SNMP	D-1
D.1 Installing the SunATM SNMP Software	D-1
D.2 Setting Up the Management Console	D-1
D.3 Setting Up Agent Systems	D-3
E. Application Programmers' Interface	E-1
E.1 Using the SunATM API with the q93b and the ATM Device Drivers	E-2
E.1.1 Establishing a Connection to the q93b Driver	E-2
E.1.2 Setting up an ATM Connection Over a Switched Virtual Circuit (SVC)	E-3
E.1.3 Connecting, Sending, and Receiving Data with the ATM Device Driver	E-7
F. Running Diagnostic Tests	F-1
F.1 SunVTS Validation and Test Suite	F-1
F.2 Using the OpenBoot PROM Selftest	F-2
Glossary	Glossary-1

Index Index-1