

Figures

Figure 1-1	Sun Ultra 1 Series System Back Panel.	1-4
Figure 1-2	SunATM-622/MMF SBus Adapter.	1-4
Figure 1-3	Installing the SunATM-622/MMF SBus Adapter.	1-5
Figure 1-4	SunATM-622/MMF SBus Adapter's Backplate	1-5
Figure 2-1	SunATM-155/MMF SBus Adapter 2.1 and Back Panel.	2-3
Figure 2-2	SunATM-155/UTP5 SBus Adapter 2.1 and Back Panel.	2-4
Figure 2-3	SunATM-155/MMF SBus Adapter 2.1	2-8
Figure 2-4	SunATM-155/UTP5 SBus Adapter 2.1.	2-9
Figure 4-1	atmadmin Main Menu	4-5
Figure 4-2	System Parameter Group Menu	4-6
Figure 4-3	Interface Configuration Menu	4-7
Figure 4-4	Physical Layer Parameter Menu	4-10
Figure 4-5	Signalling Parameter Menu	4-11
Figure 4-6	ILMI Configuration Menu	4-12
Figure 4-7	Classical IP Parameter Menu.	4-13
Figure 4-8	LAN Emulation Instance Menu.	4-17

Figure 4-9	LAN Emulation Per-Instance Parameters Menu	4-18
Figure 5-1	Example <code>/etc/atmconfig</code> File.....	5-3
Figure 6-1	ATM Address Fields.....	6-2
Figure 6-2	Using <code>atmsnmpd</code> as a Forwarding Agent	6-11
Figure A-1	Designation T568B.....	A-1
Figure E-1	ATM Signalling	E-2
Figure E-2	Message Format.....	E-4
Figure E-3	Normal Call Set up and Tear Down.....	E-10