

Contents

- 1. Preparing for Installation 1**
 - Features 2
 - Hardware and Software Requirements 3
 - Checking the OpenBoot PROM Revision Level 3
 - ▼ Displaying the OpenBoot PROM Revision Level 4
 - Warning for SPARCserver 1000/1000E and SPARCcenter 2000/2000E Systems 4

- 2. Installing the Adapter 5**
 - Installing the Adapter 5
 - Verifying the Installation 6
 - Examining Network Activity 7
 - Changing the Device Names on Solaris 2.4 Systems 8
 - Rebooting the System 10

- 3. Using the Sun Quad FastEthernet Driver Software 11**
 - Installing the Driver Software 11
 - Host File Configuration 11
 - Booting the System 14
 - Booting From the Network 14
 - Booting a Diskless Client System 15

Performing a Net-Install of the Solaris Environment Over the <code>qfe</code> Interface	17
▼ Updating the Solaris Archive to Use the <code>qfe</code> Interface	17
Installing the Solaris Environment on a System with the Sun Quad FastEthernet SBus adapter	20
Post-Installation Procedures (Optional)	20
Configuring Driver Parameters	20
Increasing TCP/IP Performance	21
Forcing Network Speed Between 10 Mbps and 100 Mbps	21
Auto-Negotiation	23
<code>local-mac-address</code> Property	23
A. Specifications	25
Physical Dimensions	25
Power Requirements	26
Environmental Specifications	26
Performance Specifications	27
B. Interface Signals	29
C. Configuring the Quad FastEthernet Device Driver Parameters	31
Internal Transceiver	31
Driver Parameter Values and Definitions	32
Defining the Current Status	33
Inter-Packet Gap Parameters	33
Defining an Additional Delay Before Transmitting a Packet Using <code>lance_mode</code> and <code>ipg0</code>	34
Operational Mode Parameters	35
Defining the Number of Back-to-Back Packets to Transmit	36
Reporting Transceiver Capabilities	36
Reporting the Link Partner Capabilities	37

Setting <code>qfe</code> Driver Parameters	38
Setting Parameters Using the <code>ndd</code> Utility	38
▼ To Specify the Device Instance for the <code>ndd</code> Utility	39
▼ To Select One Local Transceiver Capability and Setting Forced Mode	42
▼ To Set the Mode to Auto-Negotiation	42
Setting Parameters in the <code>/etc/system</code> File	43
▼ Setting the <code>ipg1</code> and <code>ipg2</code> Parameters in the <code>/etc/system</code> File	44
Setting Parameters Using the <code>qfe.conf</code> File	44
Setting <code>ipg</code> Driver Parameters Using a <code>qfe.conf</code> File	45
D. Running Diagnostics Tests	47
Using the SunDiag System Exerciser	47
Editing the <code>.usertest</code> File	48
SunDiag Main Window	48
Starting the Test	50
Using the OpenBoot PROM FCode Selftest	50
▼ Running the Ethernet FCode Selftest Diagnostic	51

