

Contents

Part I Preparing for Service

1. Preparing for FRU Installation and Replacement 1-1

- 1.1 Tools Required 1-1
- 1.2 Attaching the Antistatic Wrist Strap 1-1
- 1.3 Determining If You Have a Front-Access or Rear-Access Model 1-3
- 1.4 FRU Categories 1-4
 - 1.4.1 Hot-Swappable FRUs 1-4
 - 1.4.2 Cold-Swappable FRUs 1-5
- 1.5 Device Names 1-5
 - 1.5.1 Device Names for I/O Card Slots in the Netra ct Servers 1-5
 - 1.5.2 Device Names for Hard Disk Drives 1-6

2. Powering the Server Off and On 2-1

- 2.1 Powering On the Server 2-1
- 2.2 Powering Off the Server 2-6

3. Handling Cards and Assemblies 3-1

- 3.1 Handling CompactPCI Cards 3-1
- 3.2 Handling Assemblies 3-2

Part II Troubleshooting the System

- 4. Troubleshooting the System 4-1**
 - 4.1 Troubleshooting the System Using the System Status Panel 4-1
 - 4.1.1 Locating and Understanding the System Status Panel 4-2
 - 4.1.2 Using the System Status Panel LEDs to Troubleshoot the System 4-3
 - 4.2 Troubleshooting the System Using `envmond` 4-7
 - 4.3 Troubleshooting the System Using `prtdiag` 4-7
 - 4.4 Troubleshooting the System Using the SunVTS Test Suite 4-12
 - 4.5 Troubleshooting the System Using the Power-On Self Test (POST) 4-12
 - 4.6 Troubleshooting the System Using the Remote System Control (RSC) 4-14
 - 4.7 Troubleshooting a Power Supply Using the Power Supply Unit LEDs 4-14
 - 4.7.1 Troubleshooting the Power Supply Unit in the Netra ct 400 Server 4-15
 - 4.7.2 Troubleshooting the Power Supply Units in the Netra ct 800 Server 4-15
 - 4.8 Troubleshooting a CPU Card 4-16
 - 4.8.1 General Troubleshooting Tips 4-17
 - 4.8.2 General Troubleshooting Requirements 4-21
 - 4.8.3 Mechanical Failures 4-21
 - 4.8.4 Power-On Failures 4-21
 - 4.8.5 Failures Subsequent to Power-On 4-22
 - 4.8.6 Troubleshooting During POST/OBP and During Boot Process 4-22
 - 4.8.7 OpenBoot PROM On-Board Diagnostics 4-23
 - 4.8.8 OpenBoot Diagnostics (OB Diag) 4-27

Part III Replacing Hot-Swappable FRUs

- 5. Hot Swap Software Commands 5-1**
 - 5.1 Using the `cfgadm` Utility 5-2
 - 5.1.1 Logging In to the Netra ct Server 5-2
 - 5.1.2 Running the `cfgadm` Utility 5-2

- 6. Removing and Replacing Hot-Swappable Cards 6-1**
 - 6.1 Front-Access Models 6-2
 - 6.1.1 I/O Card 6-2
 - 6.1.2 Alarm Card 6-18
 - 6.2 Rear-Access Models 6-39
 - 6.2.1 Front I/O Card and I/O Rear Transition Card 6-40
 - 6.2.2 Alarm Rear Transition Card (Netra ct 800 Server Only) 6-51

- 7. Removing and Replacing Hard Disk Drives and Removeable Media 7-1**
 - 7.1 Hard Disk Drive 7-1
 - 7.1.1 Removing a Hard Disk Drive 7-2
 - 7.1.2 Installing a Hard Disk Drive 7-7
 - 7.2 CD-ROM/DVD or DAT Drive (Netra ct 800 Server Only) 7-8
 - 7.2.1 Removing a CD-ROM/DVD or DAT Drive 7-9
 - 7.2.2 Installing a CD-ROM/DVD or DAT Drive 7-11

- 8. Removing and Replacing Hot-Swappable Subassemblies 8-1**
 - 8.1 System Status Panel 8-1
 - 8.1.1 Removing the System Status Panel 8-2
 - 8.1.2 Replacing the System Status Panel 8-5
 - 8.2 System Controller Board 8-7
 - 8.2.1 Removing the System Controller Board 8-7
 - 8.2.2 Replacing the System Controller Board 8-10
 - 8.3 Main Air Filter 8-11
 - 8.3.1 Removing the Main Air Filter 8-11
 - 8.3.2 Replacing the Main Air Filter 8-13
 - 8.4 Power Supply Unit 8-14
 - 8.4.1 Removing a Hot-Swappable Power Supply Unit 8-14
 - 8.4.2 Replacing a Hot-Swappable Power Supply Unit 8-17
 - 8.5 Power Supply Unit Air Filter 8-18
 - 8.5.1 Removing a Power Supply Unit Air Filter 8-18

- 8.5.2 Replacing a Power Supply Unit Air Filter 8-21
- 8.6 Fan Tray 8-22
 - 8.6.1 Removing a Fan Tray 8-22
 - 8.6.2 Replacing a Fan Tray 8-26

Part IV Replacing Cold-Swappable FRUs

9. Removing and Replacing the Servers 9-1

- 9.1 Servers 9-1
 - 9.1.1 Removing a Server 9-1
 - 9.1.2 Replacing a Server 9-9

10. Removing and Replacing Cold-Swappable Cards 10-1

- 10.1 Front-Access Models 10-1
 - 10.1.1 CPU Card 10-2
 - 10.1.2 CPU Front Transition Card 10-10
 - 10.1.3 CPU Shunt Card (Netra ct 800 Server Only) 10-17
- 10.2 Rear-Access Models 10-19
 - 10.2.1 CPU Card 10-19
 - 10.2.2 CPU Rear Transition Card 10-26

11. Removing and Replacing Cold-Swappable Subassemblies 11-1

- 11.1 Hard Disk Drive 11-1
 - 11.1.1 Removing a Hard Disk Drive 11-2
 - 11.1.2 Replacing a Hard Disk Drive 11-4
- 11.2 Disk Adapter Module (Netra ct 400 Server Only) 11-5
 - 11.2.1 Removing a Disk Adapter Module 11-5
 - 11.2.2 Replacing a Disk Adapter Module 11-6
- 11.3 SCSI Termination Board (Netra ct 800 Server Only) 11-7
 - 11.3.1 Removing a SCSI Termination Board 11-7
 - 11.3.2 Replacing a SCSI Termination Board 11-8

- 11.4 Power Distribution Unit 11-8
 - 11.4.1 Removing the Power Distribution Unit 11-10
 - 11.4.2 Replacing the Power Distribution Unit 11-15
- 11.5 Front-Access Cable (Front-Access Models Only) 11-16
 - 11.5.1 Removing the Front-Access Cable 11-16
 - 11.5.2 Replacing a Front-Access Cable 11-19
- 11.6 Power Supply Unit 11-19
 - 11.6.1 Removing a Cold-Swappable Power Supply Unit 11-19
 - 11.6.2 Replacing a Cold-Swappable Power Supply Unit 11-22

Part V Illustrated Parts Breakdown

- 12. Illustrated Parts Breakdown 12-1**
 - 12.1 Chassis Components 12-2
 - 12.2 Netra ct 800 Server 12-4
 - 12.3 Netra ct 400 Server 12-6

Part VI Appendixes, Glossary, and Index

A. Connector Pinouts A-1

- A.1 CPU Card A-2
 - A.1.1 Ethernet Port A-3
 - A.1.2 COM Port A-4
- A.2 CPU Front Transition Card, Netra ct 800 Server A-5
 - A.2.1 Parallel Port A-6
 - A.2.2 Ethernet B Port A-7
 - A.2.3 TTY A A-8
 - A.2.4 TTY B A-9
 - A.2.5 SCSI-3 A-10
- A.3 CPU Front Transition Card, Netra ct 400 Server A-12
 - A.3.1 SCSI (VHDC) A-13
 - A.3.2 Parallel Port A-14

A.3.3	Ethernet B Port	A-15
A.3.4	TTY B	A-16
A.4	CPU Rear Transition Card	A-17
A.4.1	Parallel Port	A-19
A.4.2	TTY A	A-20
A.4.3	TTY B	A-21
A.4.4	Ethernet A Port	A-22
A.4.5	Ethernet B Port	A-23
A.4.6	SCSI (VHDC)	A-24
A.5	Alarm Card, Netra ct 800 Server	A-25
A.5.1	Alarm Port	A-26
A.5.2	Ethernet Port	A-27
A.5.3	COM 1	A-28
A.5.4	COM 2	A-29
A.6	Alarm Card, Netra ct 400 Server	A-30
A.6.1	COM 2	A-31
A.6.2	COM 1	A-32
A.6.3	Alarm Port	A-33
A.6.4	Ethernet Port	A-34
A.7	Alarm Rear Transition Card, Netra ct 800 Server	A-35
A.7.1	Ethernet Port	A-36
A.7.2	COM 2	A-37
A.7.3	COM 1	A-38
A.7.4	Alarm Port	A-39
B.	Connecting a Terminal Console to the Server	B-1
B.1	To Use an ASCII Terminal	B-1
B.2	To Use a Solaris Workstation	B-3
B.3	To Use a PC Laptop	B-5
C.	Error Messages	C-1

C.1	scsb Error Messages	C-2
C.2	Anticipated Hardware Failure	C-8
C.2.1	Transient Interrupts	C-8
C.2.2	Soft Hang	C-8
C.3	I2C Complaints	C-9
C.4	Bus Busy Complaints	C-10
D.	System Specifications	D-1
D.1	Physical Specifications	D-1
D.2	Electrical Specifications	D-2
D.3	Environmental Specifications	D-3
E.	Upgrading CPU Memory	E-1
E.1	Memory Installation	E-1
E.1.1	Memory Configurations	E-1
E.1.2	Memory Installation Procedure	E-2

