

# Figures

---

- FIGURE 1-1 Attaching the Antistatic Wrist Strap 1-2
- FIGURE 1-2 Front-Access and Rear-Access Models 1-3
- FIGURE 2-1 Locating the Power Supply Locking Mechanism on the Netra ct 800 Server 2-2
- FIGURE 2-2 Locating the Power Supply Locking Mechanism on the Netra ct 400 Server 2-3
- FIGURE 2-3 System Status Panel Locations 2-4
- FIGURE 2-4 System Power Button and System Power LED Locations (Netra ct 800 Server) 2-5
- FIGURE 2-5 System Power Button and System Power LED Locations (Netra ct 400 Server) 2-6
- FIGURE 4-1 System Status Panel Locations 4-2
- FIGURE 4-2 System Status Panel (Netra ct 800 Server) 4-3
- FIGURE 4-3 System Status Panel (Netra ct 400 Server) 4-3
- FIGURE 4-4 Power and Okay to Remove LEDs 4-4
- FIGURE 4-5 Power and Fault LEDs 4-4
- FIGURE 4-6 Connectors on the CPU Front Transition Card (Netra ct 800 Server) 4-18
- FIGURE 4-7 Connectors on the CPU Front Transition Card (Netra ct 400 Server) 4-19
- FIGURE 4-8 Connectors on the CPU Rear Transition Card (Netra ct 800 Server) 4-20
- FIGURE 4-9 Connectors on the CPU Rear Transition Card (Netra ct 400 Server) 4-20
- FIGURE 6-1 I/O Card Slots (Netra ct 800 Server) 6-3
- FIGURE 6-2 Buses for the Netra ct 800 Server (Front View) 6-4
- FIGURE 6-3 I/O Card Slots (Netra ct 400 Server) 6-5

FIGURE 6-4	Buses for the Netra ct 400 Server (Front View)	6-6
FIGURE 6-5	Loosening the Ejection Lever Captive Screws	6-7
FIGURE 6-6	Unlocking the Ejection Levers	6-8
FIGURE 6-7	Locating the I/O Card LEDs on the System Status Panel (Netra ct 800 Server)	6-9
FIGURE 6-8	Locating the I/O Card LEDs on the System Status Panel (Netra ct 400 Server)	6-10
FIGURE 6-9	Aligning the Card with the Card Cage Cutouts	6-14
FIGURE 6-10	Tightening the Ejection Lever Captive Screws	6-17
FIGURE 6-11	Location of Alarm Card in Netra ct 800 Server	6-20
FIGURE 6-12	Unlocking the Ejection Levers	6-21
FIGURE 6-13	Locating the Alarm Card LEDs on the System Status Panel (Netra ct 800 Server)	6-22
FIGURE 6-14	Plugging in Cables in Alarm Card in Netra ct 800 Server	6-29
FIGURE 6-15	Location of Alarm Card in Netra ct 400 Server	6-31
FIGURE 6-16	Unlocking the Ejection Lever	6-32
FIGURE 6-17	Locating the Alarm Card LEDs on the System Status Panel (Netra ct 400 Server)	6-33
FIGURE 6-18	Connectors on the Alarm Card (Netra ct 400 Server)	6-39
FIGURE 6-19	Buses for the Netra ct 800 Server (Front View)	6-41
FIGURE 6-20	Buses for the Netra ct 400 Server (Front View)	6-42
FIGURE 6-21	Locating the Alarm Rear Transition Card (RTC) in the Rear-Access Model of Netra ct 800 Server (Top View)	6-52
FIGURE 6-22	Connectors on the Alarm Rear Transition Card	6-54
FIGURE 7-1	Drive Bay Cover Locations	7-3
FIGURE 7-2	Locating the Hard Disk Drive LEDs on the System Status Panel (Netra ct 800 Server)	7-6
FIGURE 7-3	Removing the Removeable Media Module from a Netra ct 800 Server	7-11
FIGURE 8-1	System Status Panel Locations	8-2
FIGURE 8-2	Removing the System Status Panel (Netra ct 800 Server)	8-3
FIGURE 8-3	Removing the System Status Panel (Netra ct 400 Server)	8-4
FIGURE 8-4	Positioning the System Status Panel (Netra ct 800 Server)	8-5
FIGURE 8-5	Positioning the System Status Panel (Netra ct 400 Server)	8-6

FIGURE 8-6 Locating the System Controller Board LEDs on the System Status Panel (Netra ct 800 Server) 8-8

FIGURE 8-7 Locating the System Controller Board LEDs on the System Status Panel (Netra ct 400 Server) 8-8

FIGURE 8-8 Removing a System Controller Board 8-9

FIGURE 8-9 Inserting a System Controller Board 8-10

FIGURE 8-10 Locating the Main Air Filter (Netra ct 800 Server) 8-12

FIGURE 8-11 Locating the Main Air Filter (Netra ct 400 Server) 8-13

FIGURE 8-12 Locating the Power Supply Unit LEDs on the System Status Panel (Netra ct 800 Server) 8-15

FIGURE 8-13 Unlocking a Power Supply Unit 8-16

FIGURE 8-14 Removing a Power Supply Unit 8-17

FIGURE 8-15 Removing a Power Supply Unit Air Filter from a Netra ct 800 Server 8-19

FIGURE 8-16 Removing a Power Supply Unit Air Filter from a Netra ct 400 Server 8-20

FIGURE 8-17 Removing a Power Supply Unit Air Filter 8-21

FIGURE 8-18 Locating the Fan Tray LEDs on the System Status Panel (Netra ct 800 Server) 8-23

FIGURE 8-19 Locating the Fan Tray LEDs on the System Status Panel (Netra ct 400 Server) 8-23

FIGURE 8-20 Locating the Fan Trays in a Netra ct 800 Server 8-24

FIGURE 8-21 Locating the Fan Trays in a Netra ct 400 Server 8-25

FIGURE 8-22 Removing a Fan Tray 8-26

FIGURE 9-1 Power Supply Units and Power Distribution Units (PDUs) 9-2

FIGURE 9-2 Loosening the Screws at the Top and Bottom of a Netra ct 800 Server 9-5

FIGURE 9-3 Loosening the Screws at the Top and Bottom of a Netra ct 400 Server 9-6

FIGURE 9-4 Removing or Inserting a Netra ct 800 Server 9-7

FIGURE 9-5 Removing or Inserting a Netra ct 400 Server 9-8

FIGURE 10-1 CPU Card Locations 10-3

FIGURE 10-2 Loosening the Ejection Lever Captive Screws 10-4

FIGURE 10-3 Removing the Host ID Board 10-5

FIGURE 10-4 Aligning the Card with the Card Cage Cutouts 10-7

FIGURE 10-5 Tightening the Ejection Lever Captive Screws 10-8

- FIGURE 10-6 Connectors on the CPU Card 10-9
- FIGURE 10-7 CPU Front Transition Card Locations in a Netra ct 800 Server 10-11
- FIGURE 10-8 CPU Front Transition Card Location in a Netra ct 400 Server 10-12
- FIGURE 10-9 Proper Orientation for the Ejector Lever for Netra ct 400 Server CPU Front Transition Card 10-14
- FIGURE 10-10 Connectors on the CPU Front Transition Card (Netra ct 800 Server) 10-15
- FIGURE 10-11 Connectors on the CPU Front Transition Card (Netra ct 400 Server) 10-16
- FIGURE 10-12 Locating the CPU Shunt Cart 10-18
- FIGURE 10-13 CPU Card Locations 10-20
- FIGURE 10-14 Loosening the Ejection Lever Captive Screws 10-21
- FIGURE 10-15 Removing the Host ID Board 10-22
- FIGURE 10-16 Aligning the Card with the Card Cage Cutouts 10-24
- FIGURE 10-17 Tightening the Ejection Lever Captive Screws 10-25
- FIGURE 10-18 Connectors on the CPU Card 10-26
- FIGURE 10-19 Locating the CPU Rear Transition Card in the Rear-Access Model of a Netra ct 800 Server (Top View) 10-28
- FIGURE 10-20 Locating the CPU Rear Transition Card in the Rear-Access Model of a Netra ct 400 Server (Top View) 10-28
- FIGURE 10-21 Aligning the Card with the Rear Card Cage Cutouts 10-29
- FIGURE 10-22 Connectors on the CPU Rear Transition Card (Netra ct 800 Server) 10-30
- FIGURE 10-23 Connectors on the CPU Rear Transition Card (Netra ct 400 Server) 10-31
- FIGURE 11-1 Drive Bay Cover Locations 11-3
- FIGURE 11-2 Removing the Disk Adapter Module 11-5
- FIGURE 11-3 Removing the Disk Adapter Module Holder 11-6
- FIGURE 11-4 Locating the SCSI Termination Board 11-7
- FIGURE 11-5 Locating the Power Distribution Units 11-9
- FIGURE 11-6 Locating the Power Distribution Unit LEDs on the System Status Panel (Netra ct 800 Server) 11-10
- FIGURE 11-7 Locating the Power Distribution Unit LEDs on the System Status Panel (Netra ct 400 Server) 11-10
- FIGURE 11-8 Unplugging the DC Input Power Cable From the DC Connector, Rear-Access Model 11-12

FIGURE 11-9	Unplugging the DC Input Power Cable From the DC Connector, Front-Access Model	11-13
FIGURE 11-10	Locating the Power Distribution Units	11-14
FIGURE 11-11	Removing the Power Distribution Unit	11-15
FIGURE 11-12	Unplugging the DC Input Power Cable From the DC Connector, Front-Access Model	11-17
FIGURE 11-13	Loosening the Front-Access Cable Screws	11-18
FIGURE 11-14	Removing or Replacing a Power Supply Unit From a Netra ct 800 Server	11-20
FIGURE 11-15	Removing or Replacing a Power Supply Unit From a Netra ct 400 Server	11-21
FIGURE 11-16	Removing a Power Supply Unit From a Netra ct 800 Server	11-22
FIGURE 12-1	Illustrated Parts Breakdown, Chassis and Rear-Access Model Components	12-3
FIGURE 12-2	Illustrated Parts Breakdown, Netra ct 800 Server	12-5
FIGURE 12-3	Illustrated Parts Breakdown, Netra ct 400 Server	12-7
FIGURE A-1	Connectors on the CPU Card	A-2
FIGURE A-2	RJ-45 Ethernet Connector Diagram	A-3
FIGURE A-3	CPU Card Front Panel TTYA Diagram	A-4
FIGURE A-4	Connectors on the CPU Front Transition Card (Netra ct 800 Server)	A-5
FIGURE A-5	Parallel Connector	A-6
FIGURE A-6	RJ-45 Ethernet Connector Diagram	A-7
FIGURE A-7	TTY A Connector	A-8
FIGURE A-8	TTY B Connector	A-9
FIGURE A-9	SCSI-3 Connector	A-10
FIGURE A-10	Connectors on the CPU Front Transition Card (Netra ct 400 Server)	A-12
FIGURE A-11	Parallel Connector	A-14
FIGURE A-12	RJ-45 Ethernet Connector Diagram	A-15
FIGURE A-13	TTY B Connector	A-16
FIGURE A-14	Connectors on the CPU Rear Transition Card (Netra ct 800 Server)	A-17
FIGURE A-15	Connectors on the CPU Rear Transition Card (Netra ct 400 Server)	A-18
FIGURE A-16	Parallel Connector	A-19
FIGURE A-17	TTY A Connector	A-20

FIGURE A-18	TTY B Connector	A-21
FIGURE A-19	RJ-45 Ethernet Connector Diagram	A-22
FIGURE A-20	RJ-45 Ethernet Connector Diagram	A-23
FIGURE A-21	Connector Ports in the Alarm Card in Netra ct 800 Server	A-25
FIGURE A-22	Alarm Port	A-26
FIGURE A-23	RJ-45 Ethernet Connector Diagram	A-27
FIGURE A-24	COM 1 Connector	A-28
FIGURE A-25	COM 2 Connector	A-29
FIGURE A-26	Connectors on the Alarm Card (Netra ct 400 Server)	A-30
FIGURE A-27	RJ-45 COM Connector Diagram	A-31
FIGURE A-28	RJ-45 COM Connector Diagram	A-32
FIGURE A-29	Alarm Port	A-33
FIGURE A-30	RJ-45 Ethernet Connector Diagram	A-34
FIGURE A-31	Connectors on the Alarm Rear Transition Card	A-35
FIGURE A-32	RJ45 Ethernet Connector Diagram	A-36
FIGURE A-33	COM 2 Connector	A-37
FIGURE A-34	COM 1 Connector	A-38
FIGURE A-35	Alarm Port	A-39
FIGURE E-1	Installing a Memory Module on the CPU Card	E-4
FIGURE E-2	Seating the Memory Module	E-5