

Contents

| | |
|---|----------|
| 1. Fault-Tolerant Networks | 1 |
| Overview | 1 |
| MAC Address Allocation | 3 |
| Fault-Tolerant Operation | 4 |
| Failure Handling | 5 |
| Network Booting and Installation | 5 |
| Latent Fault Checking | 5 |
| CMS Configuration | 8 |
| Files Used by Fault-Tolerant Networks | 9 |
| Configuring and Unconfiguring <code>ft_networks</code> | 10 |
| ▼ To Configure an <code>ft_network</code> to Be Nonfault-Tolerant | 10 |
| ▼ To Unconfigure a Nonfault-Tolerant <code>ft_network</code> | 12 |
| ▼ To Configure an <code>ft_network</code> to Be Fault-Tolerant | 14 |
| ▼ To Unconfigure a Fault-Tolerant <code>ft_network</code> | 16 |
| ▼ To Configure a Fault-Tolerant <code>ft_network</code> to Be Nonfault-Tolerant | 18 |
| ▼ To Set or Change the Preferred Controller | 20 |
| Troubleshooting | 23 |
| Error Messages | 23 |
| Confirming the <code>pnet</code> Connection | 25 |

| | |
|--|-----------|
| 2. ft_serial | 27 |
| Accessing the Console | 27 |
| File System Access to the Console | 28 |
| Reading the Current Multiplexor Configuration | 29 |
| Files | 30 |
| Boot Time Configuration of the Console | 30 |
| Configuring Serial Connections Using the CMS | 33 |
| ▼ To Configure a Nonredundant Serial Connection | 34 |
| Configuring a Redundant Serial Connection | 37 |
| Configuring Highly Redundant Serial Connections | 38 |
| Setting Terminal Characteristics on Redundant Serial Devices | 38 |
| | |
| 3. Split Mode | 39 |
| Split-Mode Architecture and Components | 39 |
| High-Level Architecture | 40 |
| Split-Mode Components | 42 |
| Split Daemon | 42 |
| User Interfaces | 43 |
| Communication Networks | 45 |
| Configuration Files | 45 |
| Interaction With Other System Components | 45 |
| Split-Mode Operations | 46 |
| Split | 46 |
| Editing the Configuration Files | 47 |
| Specifying the Split Master | 48 |
| Assigning Ownership of Resources | 49 |
| Preparing the Storage Devices | 49 |
| Quiescing the Devices | 50 |

| | |
|--|----|
| Splitting a Netra ft 1800 | 51 |
| While in Split Mode | 51 |
| Transfer of Ownership | 51 |
| Restrictions and Notes | 53 |
| Merge | 53 |
| Daemon Synchronization | 53 |
| Implications for SEVM | 55 |
| System Identity Issues | 56 |
| Force Option | 57 |
| Software Upgrades Using Split Mode | 58 |
| Split Example | 64 |
| Assumptions | 65 |
| Initial Configuration | 66 |
| Configuring for Split Mode | 67 |
| Editing the <code>split.conf</code> File | 68 |
| Setting Up ICN | 69 |
| Setting the Split Master | 69 |
| Adding Other IP Addresses to <code>/etc/hosts</code> | 70 |
| Configuring <code>ft_network 0</code> | 70 |
| Checking the SEVM State | 71 |
| Confirming the CPUs Are In Sync | 73 |
| Checking the Split Daemon Status | 73 |
| Quick Checklist | 74 |
| Splitting the System | 75 |
| Bringing Up the Losing Side | 78 |
| Updating <code>seagoon-2</code> | 83 |
| Merging the Systems | 83 |
| Confirming the Split Daemons are Communicating | 84 |

| | |
|--|-----------|
| Issuing the <code>merge</code> Command | 84 |
| Waiting for the CPUsets to Become Fault Tolerant | 85 |
| Bringing the Losing Side FRUs Back Online | 86 |
| Remirroring the New Boot Disk | 86 |
| Recovery Procedures | 89 |
| Power-Cycling a Domain When in Split Mode | 89 |
| Fixing a Motherboard Failed When in Split Mode | 90 |
| Fixing a Motherboard Failed as a Result of a Merge Operation | 91 |
| 4. OSdog | 93 |
| Operation | 94 |
| Hardware | 94 |
| Solaris Software | 94 |
| Design Principles | 95 |
| Configuration | 95 |
| OSdog Software | 96 |
| <u4ftdog< u=""> - OSdog Driver</u4ftdog<> | 96 |
| Hardware Interface | 96 |
| Driver Summary | 97 |
| Configuration | 97 |
| ioctls | 98 |
| User Pat Channel ioctls | 99 |
| Diagnosing OSdog Timeouts | 101 |
| Hardware Event | 101 |
| Software Event | 102 |
| Debugging the Operating System | 104 |
| Handling Panics | 104 |
| Panic and the Debugger | 105 |

| | | |
|-----------|--|------------|
| | User Patting Description and Example | 106 |
| | Developing a Custom User Pat Daemon | 107 |
| | Configuring the Default User Patting | 108 |
| | Obtaining OSdog Settings Using <code>cmsfruinfo</code> | 109 |
| | System Clock Thread Monitoring | 110 |
| | Troubleshooting | 110 |
| 5. | Motherboard Replacement | 111 |
| | Removing an Existing Motherboard | 112 |
| | ▼ To Remove a Motherboard from the Chassis | 115 |
| | Installing a New Motherboard | 122 |
| | Enabling a Replacement Motherboard | 125 |
| A. | Manpages | 127 |
| B. | The <code>cmsphonehome</code> Script | 145 |
| C. | Automatic Firmware Update | 147 |
| | Operation | 147 |
| | Preboot Checks | 147 |
| | Boot Checks | 148 |
| | Enabling the Other CPUset Module | 148 |
| | Motherboard Hot Swap | 149 |
| | Firmware Updates and Module EEPROMS | 149 |
| D. | Alarms Utility | 151 |
| E. | Split Mode for Patch D | 155 |
| | Split Example | 155 |
| | Assumptions | 155 |
| | Initial Configuration | 157 |

| | |
|--|------------|
| Configuring for Split Mode | 158 |
| Editing the <code>split.conf</code> File | 159 |
| Setting Up ICN | 160 |
| Setting the Split Master | 160 |
| Adding Other IP Addresses to <code>/etc/hosts</code> | 161 |
| Configuring <code>ft_network 0</code> | 161 |
| Checking the SEVM State | 162 |
| Confirming the CPUs Are In Sync | 164 |
| Checking the Split Daemon Status | 164 |
| Turning off Boot Disk Checksumming | 165 |
| Quick Checklist | 165 |
| Splitting the System | 166 |
| Bringing Up the Losing Side | 170 |
| Updating <code>seagoon-2</code> | 174 |
| Merging the Systems | 174 |
| Confirming the Split Daemons are Communicating | 175 |
| Issuing the <code>merge</code> Command | 175 |
| Waiting for the CPUsets to Become Fault Tolerant | 176 |
| Bringing the Losing Side FRUs Back Online | 177 |
| Remirroring the New Boot Disk | 177 |
| Index | 183 |